



Power Point Power Distribution System User Manual

Disclaimer

LSC Control Systems Pty Ltd has a corporate policy of continuous improvement, covering areas such as product design and documentation. To achieve this goal, we undertake to release software updates for all products on a regular basis. In light of this policy, some detail contained in this manual may not match the exact operation of your product. Information contained in this manual is subject to change without notice.

In any event, LSC Control Systems Pty Ltd cannot be held liable for any direct, indirect, special, incidental, or consequential damages or loss whatsoever (including, without limitation, damages for loss of profits, business interruption, or other pecuniary loss) arising out of the use or the inability to use this product for its intended purpose as expressed by the manufacturer and in conjunction with this manual.

Servicing of this product is recommended to be carried out by LSC Control Systems Pty Ltd or its authorised service agents. No liability will be accepted whatsoever for any loss or damage caused by service, maintenance or repair by unauthorised personnel. In addition, servicing by unauthorised personnel may void your warranty.

LSC Control Systems' products must only be used for the purpose for which they were intended.

Whilst every care is taken in the preparation of this manual, LSC Control Systems takes no responsibility for any errors or omissions.

Copyright Notices

"LSC Control Systems" is a registered trademark.

lsccontrol.com.au is owned and operated by LSC Control Systems Pty Ltd.

All Trademarks referred to in this manual are the registered names of their respective owners.

All rights reserved.

Contact Details

LSC Control Systems Pty Ltd

ABN 21 090 801 675

65-67 Discovery Road
Dandenong South, Victoria 3175 Australia
Tel: +61 3 9702 8000

email: info@lsccontrol.com.au

web: www.lsccontrol.com.au

Contents

1	Introduction.....	2
1.1	Overview	2
1.2	Features	2
2	Front Panel	2
3	Setting Up and Connecting	3
3.1	Safety.....	3
3.2	Unpacking	3
3.3	Mounting.....	3
3.4	Connections	3
3.4.1	Input Power Supply	3
3.4.2	Outputs and Phasing	3
4	Troubleshooting	3
4.1	Maintenance.....	3
4.2	Tripped Breakers	3
5	Specifications and Output Options	4
5.2	Wieland Pinouts.....	6
5.3	Socapex Pinouts.....	6
6	Compliance Statements	7

1 Introduction

1.1 Overview

PowerPoint is a simple to use power distribution unit with a 3 phase mains input (single phase input available) and either 6 or 12 single phase outputs depending upon the model.

Designed for applications wherever fixed or mobile power distribution is required, the PowerPoint distribution rack offers a 4-pole mains input isolator switch with Neutral Disconnect as standard and individual RCBO (RCD+MCB) per output channel. There are also 3 neon phase indicators to show power input to the rack.


Output circuit rating can be specified as either 10A, 16A or 25 Amps and back panel options include either Australian GPO, Socapex, PowerCon or Hard Wired Terminals, depending upon the model.

1.2 Features

The PowerPoint Feature list includes:

- A front panel mounted 4-pole mains input isolator switch with neutral disconnect as standard provides easy access for quick isolation for the PowerPoint
- Three neon indicators show state of input phase power. Easily visible from a distance
- Twelve 10A, twelve 16A or six 25A output circuits
- Residual Current circuit Breaker with Overcurrent protection (RCBO) devices for each output circuit are used to combine protection against current overload and short circuits and protection against earth leakage currents. Essentially, they protect connected loads and prevent users from receiving a life threatening shock. Standard on all LSC power products
- The PowerPoint is at home as a 19" rackmount module in portable flight cases or touring frames or permanently installed in equipment racks. Versatility plus for any situation!
- Three phase operation
- Single phase operation possible
- Utilising the same proven mechanical chassis as LSC's premier products such as the APS power distribution unit, GEN VI and RED3 dimmers, the PowerPoint is built to the same exacting standards ensuring great consistent performance when you need it, time after time.

2 Front Panel

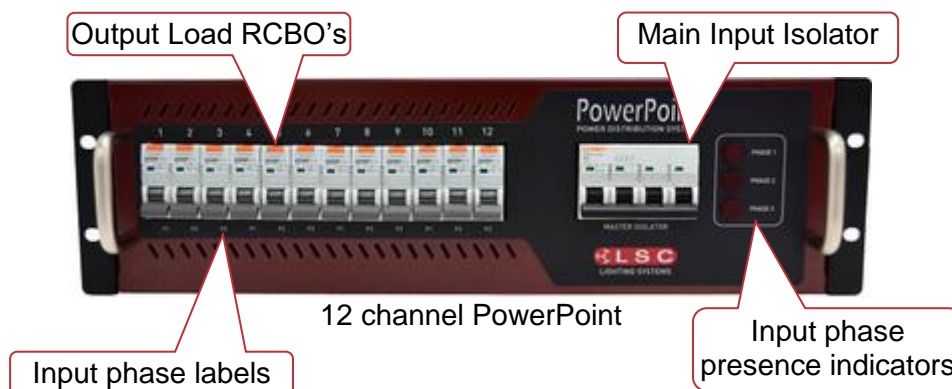

See section 4 for rear panel options.

3 Setting Up and Connecting

3.1 Safety

All electrical work must be carried out by suitably qualified persons.

3.2 Unpacking

Your PowerPoint is fully tested and inspected before leaving the factory. Upon delivery, inspect the PowerPoint for signs of damage. In the event of any damage, contact your LSC agent.

3.3 Mounting

The PowerPoint is designed for mounting in a standard 19 inch rack. It occupies 3RU (Rack Units) of space.

3.4 Connections

3.4.1 Input Power Supply

Always ensure that the Input Isolator is in the OFF position before connecting or disconnecting the input power.

PowerPoint must be fed from a suitable external circuit breaker.

The nominal input voltage is 220-240 Volts. 3-phase Star (380-415V). 50-60Hz.

Single phase operation is possible but input current must be limited to 63A in total.

3.4.2 Outputs and Phasing

Always ensure that the Output Load RCBO's are in the OFF position before connecting or disconnecting any loads.

The individual outputs are fed from the following input power phases. This input phase numbering is also shown on the front panel below each output circuit breaker.

Input Phase	Output	Input Phase	Output
1	1	1	7
2	2	2	8
3	3	3	9
1	4	1	10
2	5	2	11
3	6	3	12

4 Troubleshooting

Warning. No user controls or user serviceable parts are located inside the PowerPoint. Refer all servicing to suitably qualified personnel.

4.1 Maintenance




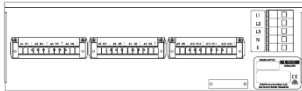





Check that all connector screw terminals (if fitted) are tight. This must be performed by a suitably qualified person.

4.2 Tripped Breakers


If a channel is not working check the RCBO (Residual Current circuit Breaker with Over current protection) for that channel. If the RCBO has tripped (OFF), firstly try to determine the cause of the breaker tripping. It could be a blown lamp or a circuit overload or a earth leakage fault. Rectify to problem (replace the lamp or reduce the load) then restore the RCBO by pushing it all the way down then lifting it up. If the RCBO continues to trip, refer the problem to a suitably qualified person.

5 Specifications and Output Options

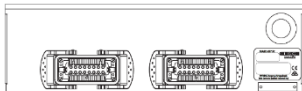Model	12 x 10A	12 x 16A	6 x 25A
Protection	10A Residual Current Breaker (RCBO) per output channel	16A Residual Current Breaker (RCBO) per output channel	25A Residual Current Breaker (RCBO) per output channel
	30mA Earth leakage trip current per channel Front panel mounted neon power indicator per phase Mains power input protected by 4-pole mains isolator switch with neutral disconnect		
		* PWP12/16/32A model supplied with 3-phase 32A MCB in lieu of 4-pole mains isolator * PWP12/16/40A model supplied with 3-phase 40A MCB in lieu of 4-pole mains isolator	
Power	Nominal 100-240V AC 3-phase star TN-S with fully rated earth, 50-60Hz Operating range typically 90-260V AC 45-65Hz Auto voltage and frequency adjustment Hardwired models supplied with rear panel mounted 5 cage clamp style terminals		
	Supplied with 1.2m long H07 rubber 5 core x 6mm ² cable with 32A 5-pin 3-phase plug fitted (export models supplied with no plug)	Supplied with 1.2m long H07 rubber 5 core x 10mm ² cable no connector supplied (export models supplied with no plug) *PWP12/16/32A model supplied with 3-phase 1.2m H07 5 core x 6mm ² rubber cable fitted with 32A 3-phase plug. *PWP12/16/40A model supplied with 3-phase 1.2m H07 5 core x 6mm ² rubber cable fitted with 40A 3-phase plug	Supplied with 1.2m long H07 rubber 5 core x 6mm ² cable with 40A 5-pin 3-phase plug fitted (export models supplied with no plug)
Mechanicals	483mm (w) x 132mm (h) x 300mm (d) 3RU x 19" rackmount Weight: 11kg Corrosion-resistant, powder-coated steel chassis with rear-screened polycarbonate labels		
Peace of mind	CE (European) and RCM (Australian) approved, two-year warranty, designed and manufactured in Australia by LSC, an Australian owned company with over 40 years' experience in developing world first products		

<p>Outputs</p>	<p>PWP12/10A</p>  <p>12 x 3-pin 10 Amp Australian sockets</p>	<p>PWP12/16A/32</p>  <p>12 x 3-pin 20 Amp Australian sockets. 32A MCB (Main Circuit Breaker)</p>	<p>PWP6/25A</p>  <p>6 paired 3-pin 20Amp/15Amp Australian sockets</p>
	<p>PWP12/10T</p>  <p>12Ch x 10A Hardwired terminals</p>	<p>PWP12/16A/40</p>  <p>12 x 3-pin 20 Amp Australian sockets. 40A MCB (Main Circuit Breaker)</p>	<p>PWP6/25T</p>  <p>6Ch x 25A Hardwired terminals</p>
	<p>PWP12/10W</p>  <p>2 x 16-pin Wieland sockets</p>		
	<p>PWP12/10X.</p>  <p>2 x 19-pin Socapex sockets</p>		
	<p>PWP12/10P</p>  <p>12 x PowerCON sockets</p>		


5.2 Wieland Pinouts

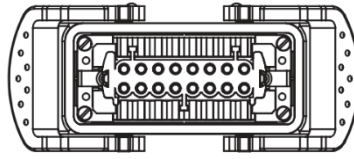

WARNING. Several wiring standards exist for the pin outs of Wieland multipin sockets. If in doubt, a suitably qualified person should check that your Wieland cables are wired to the same standard as your Powerpoint..

Note: Earth connection is via the clips on the side of the socket insert.

5.3 Socapex Pinouts

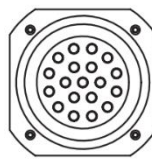

Connector #1	Function	Connector #2	Function
Pin 1	Chan 1 Active	Pin 1	Chan 7 Active
Pin 2	Chan 1 Neutral	Pin 2	Chan 7 Neutral
Pin 3	Chan 2 Active	Pin 3	Chan 8 Active
Pin 4	Chan 2 Neutral	Pin 4	Chan 8 Neutral
Pin 5	Chan 3 Active	Pin 5	Chan 9 Active
Pin 6	Chan 3 Neutral	Pin 6	Chan 9 Neutral
Pin 7	Chan 4 Active	Pin 7	Chan 10 Active
Pin 8	Chan 4 Neutral	Pin 8	Chan 10 Neutral
Pin 9	Chan 5 Active	Pin 9	Chan 11 Active
Pin 10	Chan 5 Neutral	Pin 10	Chan 11 Neutral
Pin 11	Chan 6 Active	Pin 11	Chan 12 Active
Pin 12	Chan 6 Neutral	Pin 12	Chan 12 Neutral
Pin 13	Earth	Pin 13	Earth
Pin 14	Earth	Pin 14	Earth
Pin 15	Earth	Pin 15	Earth
Pin 16	Earth	Pin 16	Earth
Pin 17	Earth	Pin 17	Earth
Pin 18	Earth	Pin 18	Earth
Pin 19	Earth	Pin 19	Earth

6 Compliance Statements

The Power Point from LSC Control Systems Pty Ltd meets all required CE (European), RCM (Australian) and UKCA (United Kingdom) standards.

CENELEC (European Committee for Electrotechnical Standardization).



Australian RCM (Regulatory Compliance Mark).



UK Conformity Assessed.



WEEE (Waste Electrical and Electronic Equipment).



The WEEE symbol indicates that the product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.



For more information about how to recycle your LSC product, contact the dealer where you purchased the product or contact LSC via email at info@lsccontrol.com.au

You can also take any old electrical equipment to participating civic amenity sites (often known as 'household waste recycling centres') run by local councils. You can locate your closest participating recycling centre using the following links.

- AUSTRALIA <http://www.dropzone.org.au>.
- NEW ZEALAND <http://ewaste.org.nz/welcome/main>
- NORTH AMERICA <http://1800recycling.com>
- UK www.recycle-more.co.uk.

-END-